



Watch Care

To best preserve your DAS.4 clocks in your possession, here are some useful tips:

Maintenance

We recommend that you have done all the necessary service and repairs that your watch needs, either at our brands headquarters or at an authorized dealer. Please retain your receipt and/or certified warranty as evidence of the authenticity of your watch.

General Tips

Your watch has precision accessories. For the best possible operation, please follow the simple tips below:

1. Avoid leaving your watch exposed to extreme environments for long periods of time – intense sunshine, extreme heat or extreme cold.
2. Do not use the buttons or rim when the watch is submerged in water. If water or moisture appears inside the case, you are highly advised to present your watch for immediate inspection. Water may corrode some internal parts of your watch.
3. Your watch is designed to withstand normal vibrations that may occur during use, but intense vibrations and falls should be avoided.
4. Clean your watch by using a dry soft cloth.
5. You should avoid using soap or any other chemical that might damage your watch.

Water Resistance

All DAS.4 watches are waterproof to at least 3 atmospheres (ATM), which means protection against moisture such as rain and everyday use water. They should not be submerged in water.

For the best possible maintenance, we recommend that every two (2) years you should replace via an authorized partner or at our headquarters any damaged safety part that may affect the durability of your watch.

DAS.4

WARM WATER IS PROHIBITED			RAIN accidental touch	HAND WASHING accidental touch	SHOWER no warm water	SWIMMING	DIVING snorkel	DIVING scuba diving
ATM (or BARS)	METERS	FEET						
-	-	-	⚠	✗	✗	✗	✗	✗
Water Resistant	Water Resistant	Water Resistant	✓	⚠	✗	✗	✗	✗
3	30	100	✓	✓	⚠	✗	✗	✗
5	50	200	✓	✓	✓	⚠	✗	✗
10	100	330	✓	✓	✓	✓	⚠	✗
20	200	660	✓	✓	✓	✓	✓	⚠
30+	300+	1000+	✓	✓	✓	✓	✓	✓

From 10ATM and above, necessary condition **ANNUAL WATER ROOFING CHECK**

⚠ YES, with care

Mechanisms

All our watches have a Quartz movement, meaning they are battery operated. The movement of your watch should be maintained every two (2) years to ensure that they are operating properly.

Battery Replacement

Your battery will need to be replaced approximately every two (2) years. The battery indicates that it is about to expire when the second pointer moves every 2 seconds instead of every second. However, the Hour and Minute pointers, are moving normally.

In case you need to replace your watch battery, we recommend that you opt for an authorized DAS.4 watches dealer to help us ensure that any of the watch fuses will not be affected by the change.

Any damage caused by an unauthorized representative will not be covered by the warranty.