

# DAS.4

SMARTWATCHES & WEARABLES

## SL13 | User Manual



# Introduction

Thank you for choosing our product! Please read the user manual in order to have a complete understanding on the smartwatches features and operation method.

The functions in the user manual may be slightly different from the final product.

Typos and inconsistencies in this manual will be corrected in a timely manner.

If we have updates, this manual will change without notice. Our company reserves the right to revise the manual.

**Package:** One gift box, one user manual, one smartwatch, one charging cable.

**Remark:** This model is dustproof only.

Do **NOT** wear this product when near water. The warranty does not cover you in case of damage from the above reason.

# Buttons Instruction

**Button No1:** Click once the button to enter the menu. Double click the button to switch the style of the menu of the smartwatch. When you explore the menu you can click once the button to return to your previous screen.

**Button No2:** Hold for a few second the button to turn ON/ OFF the smartwatch. Press the button once to return to the homes screen.

**Dial:** Hold the touch screen for a few seconds to enter the watchface list. Scroll left or right to choose a watchface.



**Charging instruction:** this product adopts is using magnetic force charging. Supports **5V= 1A** mobile phone charger and computer USB interface. Put the charging cable to the back of the device's charging pins, it will charge automatically. It usually takes 2 hours to fully charge. Do not use the watch when charging.


**Remark:** You should place the magnetic charger correctly at the pins. If the charger is not properly aligned with the pins, it will cause the circuit to burn.



# Connection

The watch can connect with your phone by downloading the application “**MasWear**” using one of the methods below

1) Android / IOS : Scan the QR code using any scanner, to download the app “MasWear”.

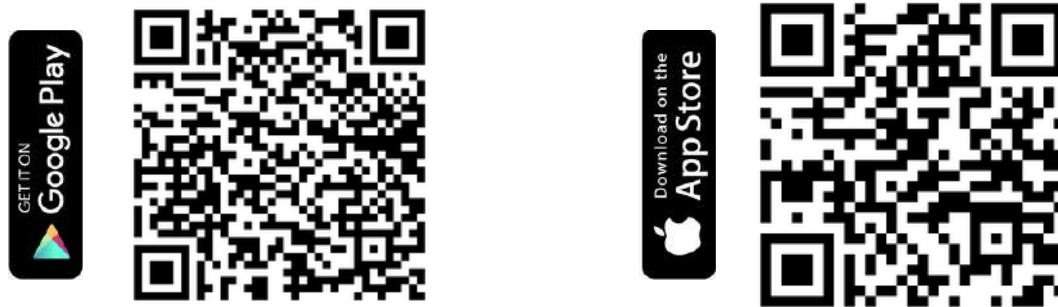

2) Search on Google Play Store / APP Store and download the “MasWear” App.

After installation, turn on phone Bluetooth and GPS. Open the app, confirm the notifications and all others permission “MasWear” asks are enabled, and fill up personal information. Tap “Device”, search “**L13 PLUS**” device (turn on the GPS in the smart phone before binding) and tap connect.

In order to use the loudspeaker and receive/ answer calls via Bluetooth, you must also connect the smartwatch directly with the mobile phones Bluetooth.

Go to Bluetooth--> search for the L13 PLUS device-->connect it.

For more information on the connection, please turn to our website ([www.das-4.com](http://www.das-4.com)) and search the "Quick Starter Guide" button. There you will find quick and simple steps to connect the smartwatch with your mobile phone.

# Main Features:

**Dial:** When the connection is successful you can dial numbers and make a call via your smartwatch screen and Bluetooth.

**Phonebook:** When the connection is successful with the APP you can sync contacts from your smartphone.

**Call logs:** Sync your call history from your smartphone.

**SMS:** Sync all your messages, like SMS/ QQ/ WeChat, etc. (The phones who use IOS12 automatically block all notifications).

**Sports Mode:** Monitor and analyse your sports activity like Walking / Running Indoor or Outdoor/ Cycling/ Climbing. Sports Mode will record the time of the exercise, the kilometers, the distance, the calories and your heart rate.

**Step Count:** Count your daily steps. Each day the Step Count resets at 00:00. You may set a daily goal for the steps and if you manage to fulfill it the smartwatch will send a notification.

**Sedentary Reminder:** Set the sedentary time and the watch will vibrate when the time is up to stand and take a break.

**Remote Camera:** Accept all the necessary licences in the APP and control your phones camera.

**Settings:** It includes time, brightness, password, factory reset, information about the smartwatch (BT name, smartwatch name, MAC Address).

# Health:

**Please note: The device is not a medical device. Any values shown are for reference only.**

## Heart Rate Monitoring Function:

Place correctly the smartwatch on your wrist and measure your heart rate in real time.



## Blood Pressure Function:

Place correctly the smartwatch on your wrist and measure your blood pressure.



## Blood Oxygen Function:

Place correctly the smartwatch on your wrist and measure your blood oxygen.





**Please note: The device is not a medical device. Any values shown are for reference only.**

**Sleep monitor:**

Activate and monitor your quality of your sleep.



**Anti- Lost:** Click on the Finf Device in the APP to send a command to your smartwatch. Then your smartwatch will ring in order to inform you where it is. It is necessary to have a stable connection between the APP and the phone.

**Calendar:** View the current day and month.

**Calculator:** Make simple calculations.

**Stopwatch:** Count the time.

**Style of menu:** Choose which menu you like from 4 styles.

**Voice Assistance - Siri:** Hold for a few seconds the Button No1 to enter the Voice Assistant. It is necessary to have a stable connection between the APP and the phone.



## **What is NOT Included in the Warranty Terms?**

This warranty does not include:

- Any defects caused by an accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, loss of parts, tampering or attempted repair by a person not authorized by the distributor.
- Any product that has not been installed, operated or maintained in accordance with the manufacturer 's instruction manual provided with the product.
- Any product that has been used for purposes other than the intended use.
- Any damage caused by improper power input or improper cable connection.

# Disclaimer

- 1) Please ensure that Bluetooth and mobile GPS are turned on. When searching for the device via Bluetooth, make sure that no other device is connected. When searching for the device via Bluetooth, keep a close distance between your mobile and smartwatch.
- 2) If the Bluetooth connection is unstable during operation, try restarting the watch and connecting it to the mobile again. Be sure to turn on the automatic start for the smartwatch application, in the settings of your mobile phone. Also turn off the battery optimization (without restrictions) for the specific application, so that the continuous application-smartwatch communication is not interrupted.
- 3) If there is a problem with the watch or its use, please contact the store where you purchased it.
- 4) The measurements of the watch are for reference only and not for medical use. Please follow your doctor's instructions and do not use the measurements to make your own diagnosis.
- 5) The watch can withstand accidental contact with water. However, it can not be used for diving or being under water for a long time. In addition, the watch should not come in contact with hot water, as steam can penetrate the seal and cause internal damage.
- 6) The company has the right to modify the contents of this user manual without prior notice. Some functions differ depending on the software they carry.

7) **CAUTION:** Do not use a power adapter that gives more than **5v = 1A** to charge the device. If you use a charger larger than 1A for charging, the circuit and / or battery may be damaged.

8) Once the watch is charging, disconnect the cable from the power supply to prevent a short circuit if it comes in contact with conducting objects.

9) Do not leave the peripherals and accessories in areas where the temperature is too high or too low. Otherwise the device may malfunction.

10) Avoid hitting the device to reduce the risk of damage.

**Only dustproof only.**

**Seawater is prohibited.**

# FAQ

## **1) What can I do if the smartwatch doesn't appear on the list with the available devices?**

First please check if the smartwatch has battery (over 20%). Then place the smartwatch close to the mobile phone and try again. If this problem still exists, please turn OFF and ON the mobile's Bluetooth and try again.

## **2) Why is heart rate not being measured?**

To make the measurement correctly, the watch must have good contact with your skin and the hand is not in motion.

## **3) Why is the watch not showing the messages?**

You must have the "Access to notifications" permission enabled. You need to check that the message also appears in the notification bar of your mobile. If it is not displayed, the message cannot be forwarded to the watch.

**Caution:** Consult your doctor before starting any new physical activity. Although the watch can measure your heart rate in real time, it cannot be used for medical and diagnostic purposes.

**The warranty terms that cover the product are mentioned in the details on the website.**